




Radio Remote Control Operation Manual

Model: 7-295-000109, 6-function rollback

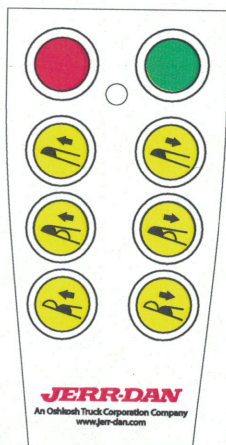

OPERATION

Using the remote control

Press the green button on the transmitter.

The red LED will flash to indicate that the transmitter is on.

Press the yellow function keys to operate remote functions.

When finished, press the red button to turn OFF.

To conserve battery life, always turn off when not in use.

Transmitter will turn off automatically after 5 minutes of inactivity.

MAINTENANCE

General care

The transmitter features a protective rubber boot. However, it is best to avoid dropping the transmitter as damage may result.

Take care with the belt clip. It will break if it is pulled too hard.

Cleaning of transmitter is recommended periodically, and may be done with a clean, damp cloth. Submerging in water or pressure-washing will damage the unit.

The receiver unit is encapsulated for protection, and has no serviceable parts inside.

Battery replacement

The transmitter is powered by a 9-volt battery. To replace the battery, follow these steps:

1. Remove transmitter from protective rubber boot.
2. Slide the battery compartment cover latch to open the battery compartment.
3. Replace 9-volt battery and replace battery compartment cover.

Transmitter replacement

In the event the transmitter is lost, stolen, or damaged. The receiver must be programmed to the replacement transmitter. To program a new transmitter, follow these steps:

1. Turn off power to RECEIVER by momentarily removing fuse.
2. Re-insert fuse.
3. Press and hold the 2 TOP YELLOW buttons at the same time WITHIN 10-seconds of turning on the receiver.
4. Receiver should now respond to the new transmitter.

TROUBLESHOOTING

Transmitter LED not on

Possible problem/solution:

1. Transmitter off. Press green button to turn on transmitter.
2. Dead batteries. Replace with new, alkaline type.
3. Batteries in backwards. Check polarity + and -

Transmitter LED on, but functions not working at all

Possible problem/solution:

1. Receiver not powered on. Check electrical plug and fuse.
2. Receiver not programmed. See "Transmitter Replacement"
3. Out of range. Stand within 100 feet for best results.
4. Obstructions. Maintain line-of-sight to vehicle.

Functions operate intermittently

Possible problem/solution:

1. Out of range. Stand within 100 feet for best results.
2. Obstructions. Maintain line-of-sight to vehicle.
3. Interference. Make sure no other transmitters are operating in the immediate area.